
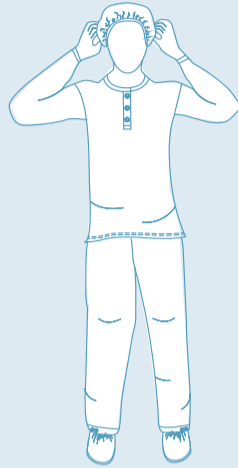
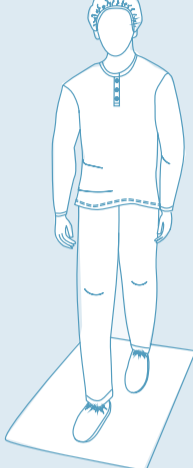
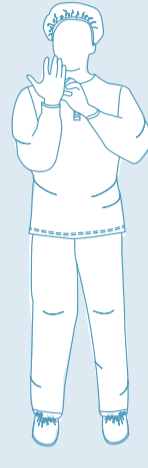
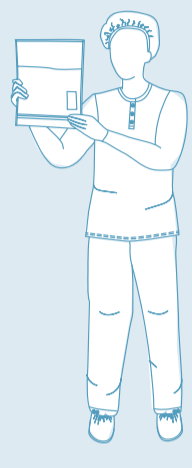
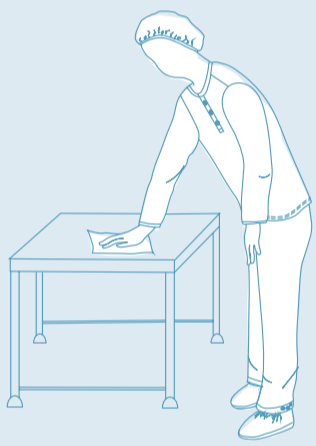

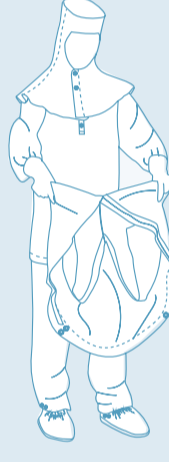



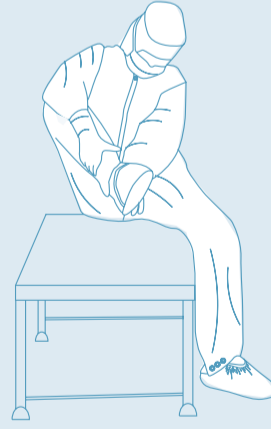
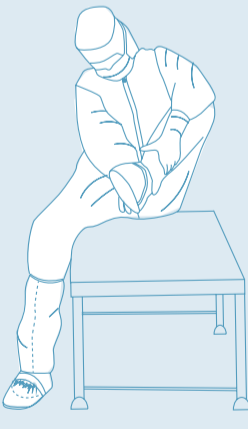
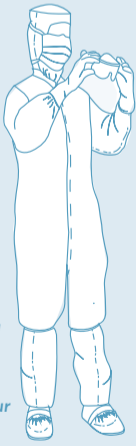
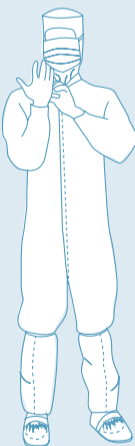
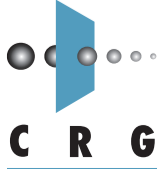


STERILE GOWNING



 <p>1</p> <p>WASH HANDS with disinfectant and dry with non-linting wiper.</p>	 <p>2</p> <p>DON HEAD COVER ensure that ears and hair are completely covered.</p>	 <p>3</p> <p>DON SHOE COVERS take 3 steps across tacky mat.</p>	 <p>4</p> <p>ENTER AIRLOCK don sterile gowning gloves.</p>	 <p>5</p> <p>SELECT GARMENTS check indicator, pouch seal and expiry date to confirm sterility.</p>
 <p>6</p> <p>WIPE BENCH with suitable grade alcohol with dry wipe or pre-saturated wipe.</p>	 <p>7</p> <p>DON HOOD remove from pouch without touching outside surface.</p>	 <p>8</p> <p>HOLD COVERALL at hip level, ensuring that it does not touch the floor.</p>	 <p>9</p> <p>PUT LEG IN be careful not to touch the outside - repeat for other leg.</p>	 <p>10</p> <p>PUT ARMS IN without touching the outside of the garment.</p>
 <p>11</p> <p>ZIP UP carefully, ensuring hood is tucked into coverall and snap shut closures.</p>	 <p>12</p> <p>DON OVERSHOE 1 sitting on bench with feet in grey zone. Ensure overshoe covers leg of coverall.</p>	 <p>13</p> <p>DON OVERSHOE 2 swing foot to white zone (clean side) of bench.</p>	 <p>14</p> <p>DON MASK ensuring it covers nose and mouth. Don cleanroom standard goggles.</p> <p><i>Mask may be required prior to hood refer to your SOP</i></p>	 <p>15</p> <p>DON 2ND GLOVES check in mirror to ensure skin and hair are adequately covered. Enter cleanroom!</p>

SPRAY GLOVED HANDS 2-3 TIMES DURING GOWNING WITH SUITABLE GRADE ALCOHOL WITH DRY WIPE OR PRE-SATURATED WIPE.



For more information phone 02 9851 4600 or visit our website www.cleanroom.com.au
TRUSTED LEADERS IN CONTAMINATION AND INFECTION CONTROL...